811268 MINI WIRELESS SPEAKER
USER MANUAL

Please take a few moments to read through this manual and learn important information about using this wireless speaker.

1. SPECIFICATIONS

- Power supply: DC5V
- Output power: 3W (THD10%)
- Frequency: 200Hz- 18KHz
- Signal & noise ratio: ≥ 60dB
- Impedance: 4 OHM (Ω)
- Li-ion output: 3.7V- 4.2V
- Lithium battery: 400mAh
- Speaker unit: 40mm

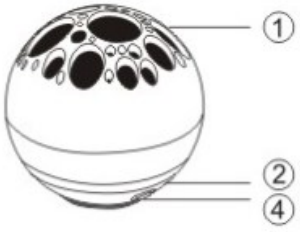

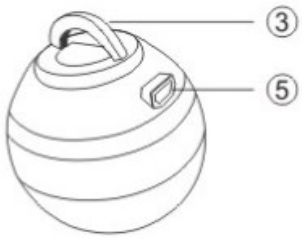

① Speaker ② LED Light ③ Hanging Ring
④ Power Switch ON/OFF ⑤ Charging/Line-in Port

2. OPERATIONS

- This device is with built-in rechargeable lithium battery, it can be charged by USB cable.
- You can listen to your music from computer or other audio equipments by using the 3.5mm stereo audio cable.
- Turn on the speaker switch, there will be a long beep that means the Bluetooth power is ON.
- When using 3.5mm audio cable, Bluetooth function will be automatically OFF.
- When speaker is turned on and not working for a long time, there will be a beep sound for warning. If still not working after one or two minutes, the speaker will turn off automatically.

3. CONNECT WITH BLUETOOTH

Search the Bluetooth device named “Speaker Teknofun” in your computer or mobile; accept the connection by pressing the respective button, you will hear a beep that indicates your device and the speaker are properly paired.

4. CHARGING

Standard USB port connects to all PC USB ports and AC adaptors.

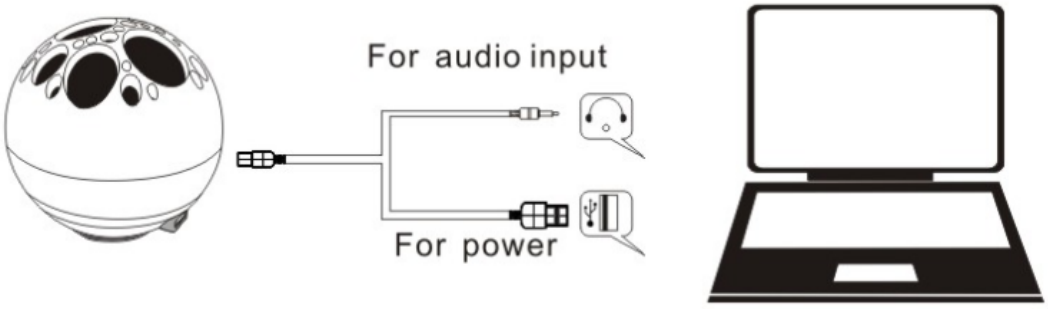

5. WHAT THE LED MEANS

WHAT YOU SEE	WHAT THIS MEANS
Quick blue LED flash	Under BT pairing mode
Extremely quick blue LED flash	Low battery
Slow blue LED flash	Connecting BT successfully
Solid red LED	Under charging
LED turn off	Fully charged under charging mode or in Line In mode

6. WARNINGS

Please keep the product in room temperature environment storage.

Do not expose the product to rain or moisture in the environment.

Do not throw; it avoids damage caused as a result of falling.

Do not disassemble or repair and reconstruct the product.

Product has built-in lithium battery, please do not throw or approach to the fire to avoid risks.

7. WARRANTY

This product is covered by our warranty of one year. For implementation of the warranty or after sales service, you should contact your dealer with your proof of purchase. Our warranty covers defects in materials or assembly due to the manufacturer with the exception of any damage from non-compliance with instructions for use or tampering with the product (such as dismantling, exposure to heat or humidity).

Note: please keep this manual, it contains important information.

MADE IN RPC

©2014 TEKNOFUN ALL RIGHTS RESERVED

©2014 MADCOW ENTERTAINMENT FRANCE ALL RIGHTS RESERVED

WWW.TEKNOFUN-ENTERTAINMENT.COM

811268 MINI ENCEINTE PORTABLE SANS FIL
MANUEL D'UTILISATION

Veuillez prendre quelques instants pour lire ce manuel et obtenir des informations importantes sur l'utilisation de cette enceinte sans fil.

1. SPÉCIFICATIONS

- Alimentation : DC5V
- Puissance de sortie : 3W (THD10%)
- Fréquence : 200 Hz - 18 KHz
- Signal & bruit : ≥ 60dB
- Impédance : 4 ohms (Ω)
- Li-ion sortie : 3,7 V - 4,2 V
- Batterie au lithium : 400mAh
- Unité d'enceinte: 40 mm

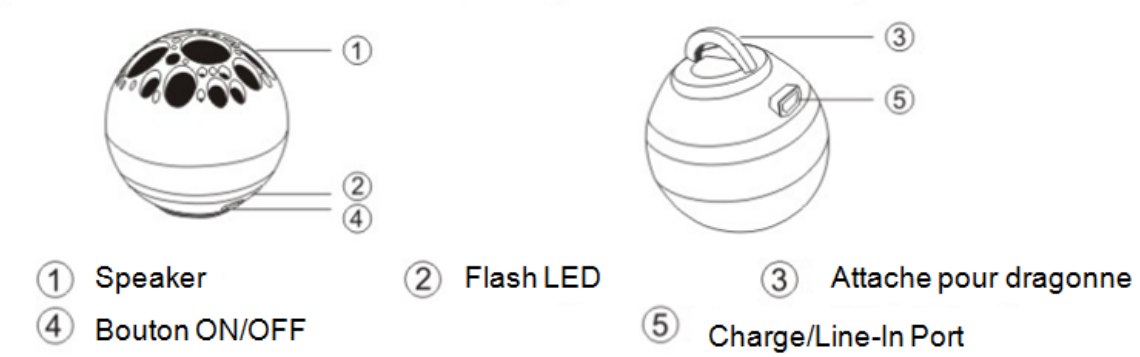

2. UTILISATION

- Ce périphérique fonctionne avec une batterie au lithium intégrée, il peut être chargé par un câble USB.
- Vous pouvez écouter votre musique à partir de l'ordinateur ou d'autres équipements audio en utilisant le câble audio stéréo 3,5 mm.
- Allumez l'interrupteur de l'enceinte, il y aura un long bip, ça signifie que la fonction Bluetooth est activée.
- Lorsque vous utilisez le câble audio 3,5mm, la fonction Bluetooth sera automatiquement désactivée.
- Lorsque l'enceinte est allumé mais vous ne l'utilisez pas, il y aura un bip d'avertissement. Après une ou deux minutes, l'enceinte s'éteint automatiquement.

3. SE CONNECTER EN MODE BLUETOOTH

Recherchez le périphérique Bluetooth nommé "Speaker Teknofun" dans votre ordinateur ou mobile; acceptez la connexion en appuyant sur le bouton correspondant, vous entendrez un bip sonore qui indique que votre appareil et l'enceinte sont correctement connectés.

4. CHARGEMENT

Le port USB standard se connecte à tous les PC ou appareils avec un port USB ou dans un adaptateur secteur.

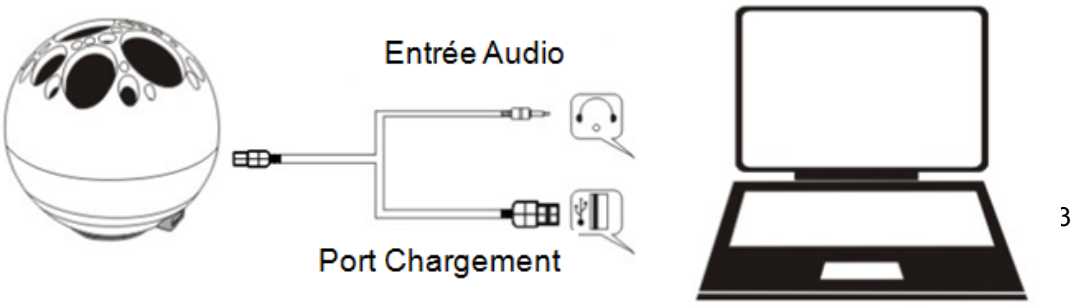

5. FLASH LED

CE QUE VOUS VOYEZ	CE QUE CELA SIGNIFIE
Flash LED bleu clignote	Mode Bluetooth ou Line-In activé
Flash LED bleu clignote rapidement	Batterie faible
Flash LED bleu lent	Connexion BT avec succès
Flash LED rouge	Mode charge
LED éteint	Complètement chargé

6. AVERTISSEMENTS

Veuillez conserver le produit dans une température environnement.

N'exposez pas le produit à la pluie ou l'humidité.

Evitez tout choc ; ça évite les dommages causés à la suite du choc.

N'essayez pas de démonter, réparer ou reconstruire le produit.

Batterie au lithium intégrée, veuillez ne pas jeter ou approche sur le feu afin d'éviter tous risques.

7. GARANTIE

Ce produit est couvert par notre garantie d'un an. Pour toute mise en œuvre de la garantie ou du service après vente, vous devez vous adresser à votre revendeur muni de votre preuve d'achat. Notre garantie couvre les défauts de matériaux ou d'assemblage causées par le fabricant à l'exclusion de toute détérioration provenant de non-respect de la notice d'utilisation ou toute intervention intempestive sur le produit (telle que démontage, exposition à la chaleur ou à l'humidité).

Note : veuillez garder ce mode d'emploi, il contient d'importantes informations.

FABRIQUE EN RPC

© 2014 TEKNOFUN TOUS DROITS RÉSERVÉS

© 2014 MADCOW ENTERTAINMENT FRANCE TOUS DROITS RÉSERVÉS

WWW.TEKNOFUN-ENTERTAINMENT.COM